

(Ref.No.) Description	Function
(5) HISS button	<p>Except BR type: This button is used to flash the immobilizer system (HISS) indicator when the ignition switch is OFF (page 47).</p>
(6) Immobilizer system (HISS) indicator (red)	<p>Except BR type: This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at \odot (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 46).</p>
(7) MODE button	<p>Select tripmeter A or B and resets the tripmeter to zero (0) (page 20). This button is also used to change unit of speedometer (page 21).</p>
(8) SET button	<p>This button is used to adjust the time (page 22). This button is also used to change unit of speedometer (page 21).</p>