


3. Remove the bolts C (4).
4. Remove the clips B (5) and clips C (6).
5. Remove the bolts D (7).
6. Release the prong (8) of the right lower cowl (9) from the grommet and remove the right lower cowl.
7. Remove the bolts E (10).
8. Release the prong (11) of the left lower cowl (12) from the grommet and remove the left lower cowl.
9. Remove the clips D (13).
10. Remove the inner half cowl (14).

Installation:

- Installation can be done in the reverse order of removal.

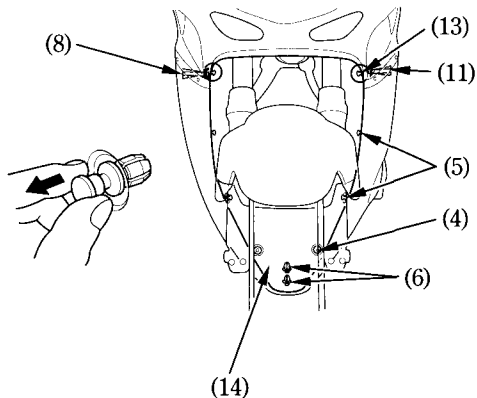

- |             |            |                      |
|-------------|------------|----------------------|
| (4) Bolts C | (8) Prong  | (13) Clips D         |
| (5) Clips B | (11) Prong | (14) Inner half cowl |
| (6) Clips C |            |                      |