

## INNER PANEL


The right and left inner panels can be removed in the same manner.

### Removal:

1. Remove the lower cowl (page 58 ) and upper cowl cover (page 60 ).
2. Remove the clip A (1).
3. Remove the clip B (2).
4. Remove the inner panel (3) by releasing it from the frame boss (4).
5. Remove the inner panel (3) by releasing it from the grommets (5) on the fuel tank.

### Installation:

- Installation can be done in the reverse order of removal.

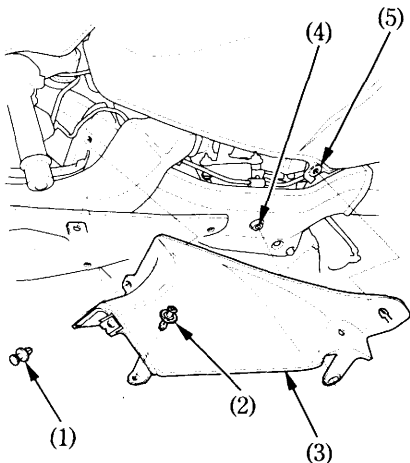

- (1) Clip A  
(2) Clip B  
(3) Inner panel

- (4) Frame boss  
(5) Grommet