



LOWER COWL

Removal:

1. Remove the bolts A (1) and bolts B (2).
2. Remove the clip A (3).

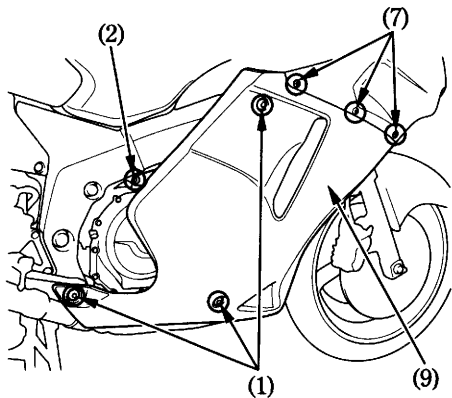

- (1) Bolts A (7) Bolts D
(2) Bolts B (9) Right lower cowl
(3) Clip A

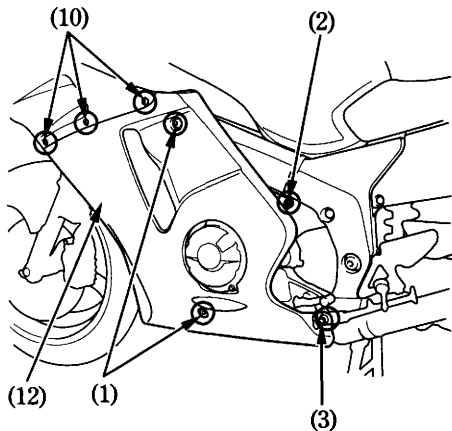

- (10) Bolts E
(12) Left lower cowl