

(Ref. No.) Description	Function
(10) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(11) Neutral indicator (green)	Lights when the transmission is in neutral.
(12) Right turn signal indicator	Flashes when the right turn signal operates.
(13) Tachometer	Shows engine rpm.
(14) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>CAUTION:</p> <p>* Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(15) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.
(16) Fuel indicator	Lights when there is only few fuel left in the fuel tank. about: 4.0ℓ (1.06 US gal, 0.88 Imp gal)