

## UPPER COWL COVER


The right and left upper cowl covers can be removed in the same manner.

### Removal:

1. Remove the nut (1) and long mount bolt (2).
2. Remove the short mount bolt (3).
3. Remove the clip (4).
4. Remove the upper cowl cover (5).

### Installation:

- Installation can be done in the reverse order of removal.

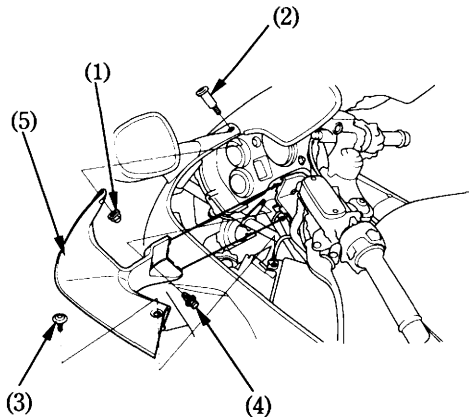

- |                      |                      |
|----------------------|----------------------|
| (1) Nut              | (4) Clip             |
| (2) Long mount bolt  | (5) Upper cowl cover |
| (3) Short mount bolt |                      |