

If the feeler gauge cannot be inserted easily, pull the fork outward or push inward until the gauge can be inserted and tighten the axle pinch bolts with the gauge inserted. After tightening, remove the gauge. After installing the wheel, apply the brakes several times, then recheck both discs for caliper holder to disc clearance. Do not operate the motorcycle without adequate clearance.

**▲ WARNING**

- \* **Failure to provide adequate disc to caliper holder clearance may damage the brake discs and impair braking efficiency.**

**CAUTION:**

- \* **After installation, operate the brake lever and brake pedal and check the brake operation.**

Remove the protective tapes from the front wheel.