

ENGINE OIL STRAINER SCREEN

Remove the right crankcase cover (page 8-3).

Remove the oil strainer screen and clean it.

Reinstall the oil strainer screen and right crankcase cover (page 8-14).

Fill the crankcase with recommended engine oil (page 3-11).



ENGINE IDLE SPEED

▲ WARNING

If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in enclosed area.

NOTE:

- Inspect and adjust the idle speed after all other engine maintenance items have been performed and are within specifications.
- The engine must be warm for accurate idle speed inspection and adjustment. Ten minutes of stop-and-go riding is sufficient.

Warm up the engine for about ten minutes.
Turn the throttle stop screw as required to obtain the specified idle speed.

IDLE SPEED: 1,400± 100 min⁻¹ (rpm)

