

ENGINE REMOVE/INSTALLATION

Connect the neutral switch and alternator connectors.



Connect the vacuum tube to the PAIR control valve and air injection hose to the PAIR check valve cover.

Install the following:

- starter motor terminal and ground cable (page 19-9)
- carburetor (page 5-13)
- air cleaner housing (page 5-4)
- fuel tank (page 5-3)
- left middle cowl (page 2-4)
- spark plug cap (page 3-8)
- exhaust system (page 2-7)

Fill and bleed the cooling system (page 6-5).
Adjust the clutch lever free play (page 3-21).

