

CLUTCH/GEARSHIFT LINKAGE

CLUTCH LIFTER ARM

Remove the lifter piece and return spring.



Remove the clutch lifter arm/spindle.

Check the following:

- lifter arm spindle for wear or damage
- return spring for fatigue or damage

Replace the dust seal if necessary.




CLUTCH

REMOVAL

Remove the clutch lifter bearing and clutch lifter plate bolts.

NOTE:

Loosen the clutch lifter plate bolts in a crisscross pattern in 2 – 3 steps.

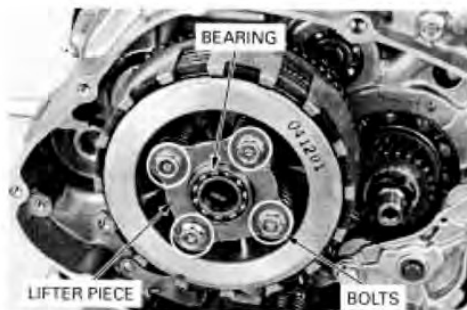

Remove the lifter plate and clutch springs.

Install the clutch center holder and tighten the four bolts. Hold the clutch assembly.

Remove the clutch center lock nut and washer using the special tool.

TOOLS:

Clutch center holder 07GMB – KT70101
Lock nut wrench, 20 x 24 mm 07716 – 0020100

Remove the four bolts, clutch center holder and clutch assembly.

