

Install the front brake light switch onto the master cylinder with aligning the boss of the switch with hole of the master cylinder.

**BRAKE LIGHT SWITCH**




Install and tighten the front brake light switch screw to the specified torque.

**TORQUE: 1.2 N-m (0.12 kgf-m, 0.9 lbf-ft)**

Apply silicone grease to the brake lever contacting area of the master piston and pivot bolt sliding surface. Install the brake lever. Install and tighten the pivot bolt and nut to the specified torque.

**TORQUE:**

**Pivot nut: 5.9 N-m (0.6 kgf-m, 4.3 lbf-ft)**

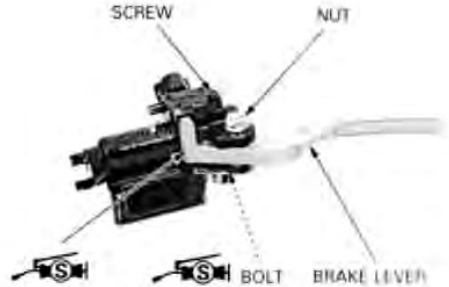

Install the master cylinder and holder with the "UP" mark facing up.

Align the end of the master cylinder with the punch mark on the handlebar, and tighten the upper bolt first, then tighten the lower bolt.



Connect the brake hose to the master cylinder with the bolt and new sealing washers as shown.

Adjust the brake hose angle and tighten the bolt to the specified torque.

**TORQUE: 34 N-m (3.5 kgf-m, 25 lbf-ft)**

Connect the front brake light switch connectors.

Fill and bleed the front brake hydraulic system (page 6-3).

