

BATTERY

REMOVAL

NOTE:

Always turn the ignition switch OFF before removing or installing the battery.

Disconnect the battery negative cable first, then positive cable from the battery.

Remove the driver seat (page 2-2).


Remove the trim clip and open the battery cover.

Remove the bolt and disconnect the battery negative (-) cable.

Remove the positive terminal cover.

Remove the bolt and disconnect the battery positive (+) cable.

Remove the battery out of the battery case.

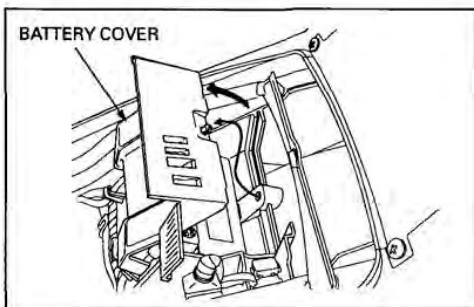

INSTALLATION

Install the battery into the case.


Coat the battery terminal with clean grease.

Place the battery into the case and connect the battery positive (+) cable to the battery, then connect the negative (-) cable.

Install the positive terminal cover.

NOTE:

Pull the cover over the positive terminal.

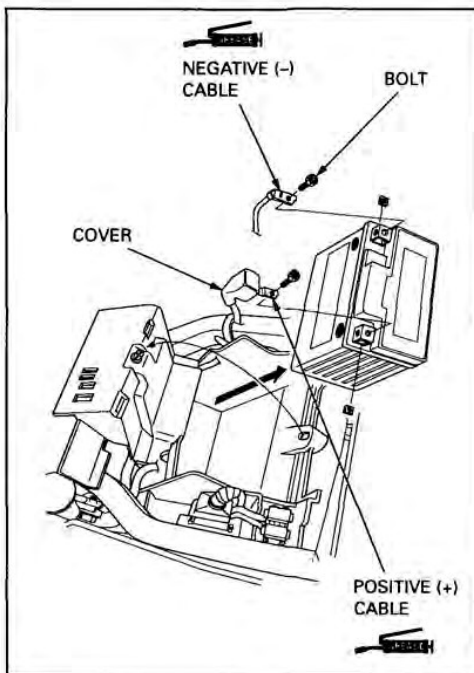

INSPECTION

Measure the battery voltage using a commercially available digital multimeter.

VOLTAGE: (20°C/68°F):

Fully charged: 13.0 – 13.2 V

Under charged: Below 12.3 V

