

## COMBINATION METER


### REMOVAL

Disassemble the upper cowl (page 2-5).

### BULB REPLACEMENT


Pull the indicator and instrument bulb socket out of the combination meter.

Remove the bulb from the socket and replace it with a new one.

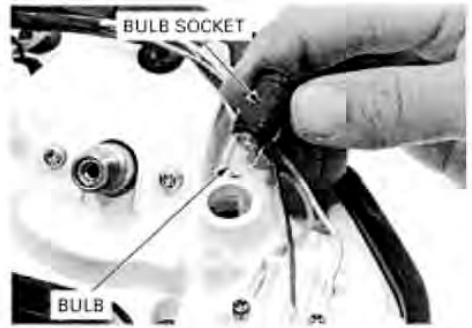

### DISASSEMBLY

Remove the six screws and speedometer front panel.

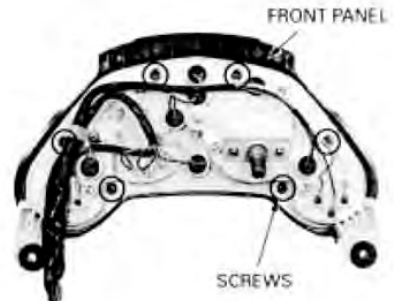

Remove the indicator and instrument light bulbs.  
Remove the screws and combination meter sub harness from the rear panel.

Remove the speedometer, tachometer, fuel meter and coolant temperature gauge.

