

## Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

### Speedometer

Shows riding speed.

### Odometer


Shows accumulated mileage.

### Tripmeter

Shows mileage per trip.

There are two tripmeters, tripmeter A (4) and tripmeter B (5). Switch between the A and B displays by pressing the select button (6) repeatedly.

To reset the tripmeter, push and hold the reset button (7) with the display in the tripmeter A or tripmeter B mode.

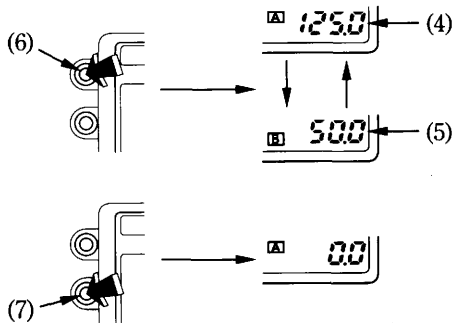

(1) Speedometer

(2) Odometer

(3) Tripmeter

(4) Tripmeter A

(5) Tripmeter B

(6) Select button

(7) Reset button