
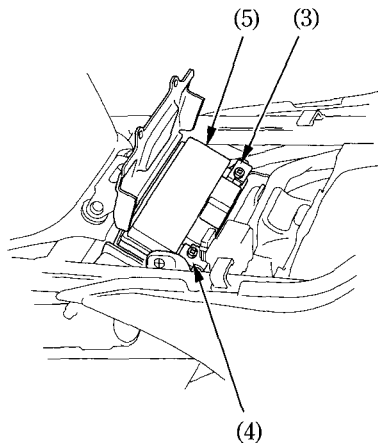


Battery Removal

The battery (5) is in the battery box below the seat.

1. Remove the seat (page 55).
2. Remove the clips (1) and open the battery cover (2).
3. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
4. Pull out the battery (5) from the battery box.

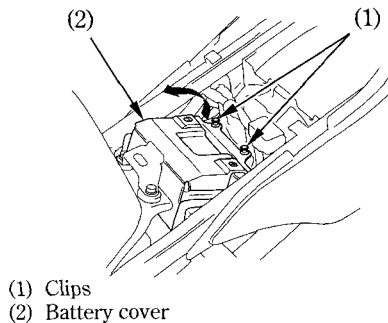

- (3) Negative (-) terminal lead
- (4) Positive (+) terminal lead
- (5) Battery