

<b>(Ref.No.) Description</b>	<b>Function</b>
(6) Multi-function display	The display includes the following functions; This display shows the initial display (page 18 ).
Low oil pressure indicator/Coolant temperature indicator	Flashes the low oil pressure indicator and/or coolant temperature indicator to notify that there is abnormality in engine oil pressure and/or coolant temperature when the malfunction indicator lights. See page 20 , 21 .
Fuel indicator	Lights when there is only few fuel left in the fuel tank. Amount of fuel left in the tank with the vehicle set upright is approximately; 3.5 ℓ (0.92 US gal , 0.77 Imp gal) See page 22 .
Speedometer	Shows riding speed (page 23 ).
Odometer	Shows accumulated mileage (page 23 ).
Tripmeter A and B	Shows mileage per trip (page 23 ).
Digital clock	Shows hour and minute (page 25 ).