

SIDE COVER

To remove the right and left side covers (1), insert the ignition key or coin into the quick-release fastener (2), turn it 90° clockwise so that the groove in the fastener is horizontal, pull out the prongs (3) and (5) and ribs (6) in the order listed and then gently pull the side cover.

Remove the side cover.



NOTE:

* Be careful, not to break the prongs (5).


NOTE:

* Use groove (A) when the ignition key is used; use groove (B) when a coin is used.

- (1) Side cover
- (2) Fastener
- (3) Prongs
- (4) Seat cowl
- (5) Prongs
- (6) Ribs

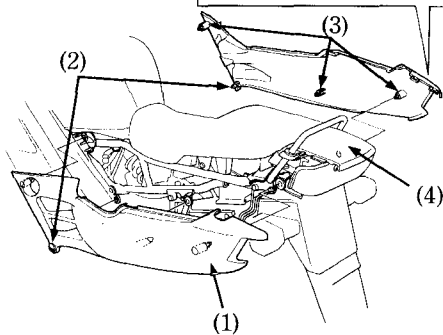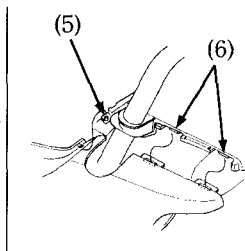

FASTENER (2) LOCKED

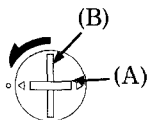

FASTENER (2) UNLOCKED

