



## ▲ WARNING

- \* **KEEP OUT OF REACH OF CHILDREN.**
- \* **Even though the battery is sealed, it still vents explosive gases. Do not allow open flames or sparks near the battery.**

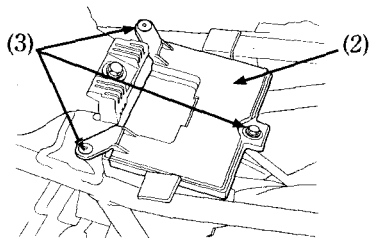

- (1) Battery  
(2) Battery cover

(3) Mount bolts

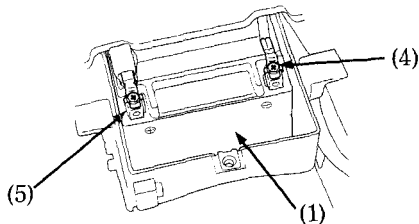

- (4) Negative (-) terminal lead  
(5) Positive (+) terminal lead

## Battery Removal

The battery (1) is in the battery box below the seat.

1. Remove both side covers and the seat (page 41–42).
2. Remove the battery cover (2) by removing the mount bolts (3).
3. Disconnect the negative (-) terminal lead (4) from the battery first, then disconnect the positive (+) terminal lead (5).
4. Pull out the battery from the battery box.