

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								106	
DRIVE CHAIN SLIDER					I			I		I		112
BRAKE FLUID		NOTE (3)		I	I	R		I	I	R		35, 37
BRAKE PADS WEAR				I	I	I		I	I	I		121, 122
BRAKE SYSTEM			I		I			I		I		35-37, 121-122
* BRAKELIGHT SWITCH					I			I		I		128
* HEADLIGHT AIM					I			I		I		70
CLUTCH SYSTEM			I	I	I	I		I	I	I		38
** EXHAUST GAS CONTROL VALVE CABLE			EVERY 24,000 km (16,000 mi) I								-	
SIDE STAND					I			I		I		114
* SUSPENSION					I			I		I		113
* NUTS, BOLTS, FASTENERS			I		I			I		I		-
** WHEELS/TYRES					I			I		I		-
** STEERING HEAD BEARINGS			I		I			I		I		-