

Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

Speedometer

Shows riding speed.

Odometer/Tripmeter


The odometer (2) shows accumulated mileage.

The tripmeter shows mileage per trip.

There are two tripmeters, tripmeter A (3) and tripmeter B (4).

Push the SEL button (5) to select the odometer, tripmeter A and tripmeter B.

To reset the tripmeter, push and hold the RESET button (6) when the display is in the tripmeter A or tripmeter B.

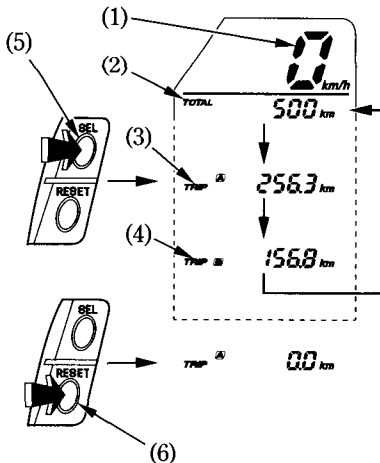

(1) Speedometer

(2) Odometer

(3) Tripmeter A

(4) Tripmeter B

(5) SEL button

(6) RESET button