

MIDDLE COWL

The middle cowl must be removed to service the spark plugs.


The right and left middle cowls can be removed in the same manner.

Removal:

1. Remove the bolt A (1) and bolts B (2).
2. Remove the clip A (3) and clips B (4).
3. Remove the middle cowl (5) and disconnect the front turn signal connector (6).
 - Be careful not to apply weight to the middle cowl.
 - Carefully release the each tabs.

Installation:

- Installation can be done in the reverse order of removal.

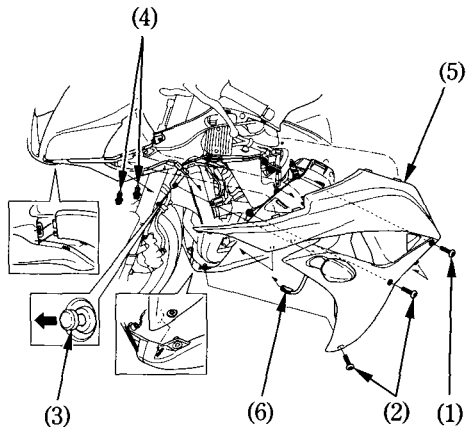

- | | |
|-------------|---------------------------------|
| (1) Bolt A | (4) Clips B |
| (2) Bolts B | (5) Middle cowl |
| (3) Clip A | (6) Front turn signal connector |