

WHEEL REMOVAL

Refer to the Safety Precautions on page 91 .

This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.

(CBR600RR ABS only)


When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel Removal

1. Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.
 2. Remove the wheel speed sensor (1) by removing the bolts (2).
- (CBR600RR ABS only)

3. Remove the right and left caliper assemblies (3) from the fork leg by removing the fixing bolts (4).

To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

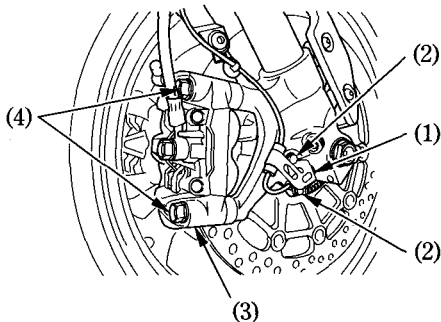

- (1) Wheel speed sensor (CBR600RR ABS only)
- (2) Bolts (CBR600RR ABS only)
- (3) Brake caliper assembly
- (4) Fixing bolts