

# MAJOR COMPONENTS (Information you need to operate this motorcycle)

## ▲ WARNING

**\* If the Pre-ride Inspection (page 48) is not performed, severe personal injury or vehicle damage may result.**

## SUSPENSION

### Front Suspension

#### Spring preload:

Adjustment must be made by turning the adjuster (1) using a 10x14mm wrench and changing the height.


The standard position in the third position from the top.

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

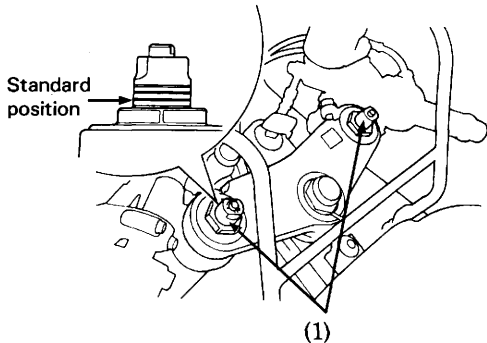

(1) Adjuster