


LOWER FAIRING

Removal:

1. Remove the middle fairing. (page 44)
2. Remove the bolts (4).
3. Remove the lower fairing (5).

Installation:

1. Removal can be done in the reverse order of installation.

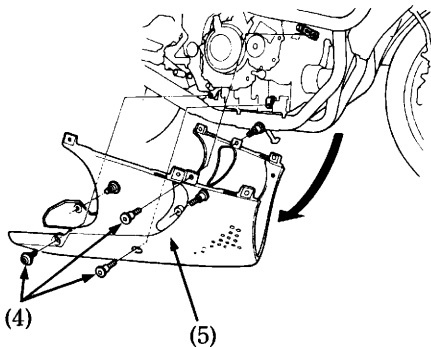

(4) Bolts

(5) Lower fairing