

<b>(Ref. No.) Description</b>	<b>Function</b>
(8) Right control button	<p><b>Except E type:</b> This button is used to adjust the time.</p> <p><b>For E type:</b> This button is used to adjust the time or to change the speed units for the speedometer.</p>
(9) Neutral indicator (green)	Lights when the transmission is in neutral.
(10) Left control button	The button is used to adjust the time, to reset the tripmeter, or to select the tripmeter A or B.
(11) Information indicator (red)	<p>The indicator lights or flashes when there is any abnormality in the coolant temperature, engine oil pressure, and/or PGM-FI (Programmed Fuel Injection) system.</p> <p>See page 16 – 19.</p>
(12) Left turn signal indicator (green)	Flashes when the left turn signal operates.