

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲WARNING

*** If the Pre-ride Inspection (page 63) is not performed, severe personal injury or vehicle damage may result.**

SUSPENSION

Front Suspension

Spring preload:

Adjust the spring preload by turning the preload adjuster (1) with the 22 mm wrench provided in the tool kit.

Make sure that both fork legs are adjusted to the same position.

To reduce (SOFT) :


Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

Standard position:

To return to the standard position, turn the adjusters until the 4th groove from the top aligns with the top surface of the fork caps.

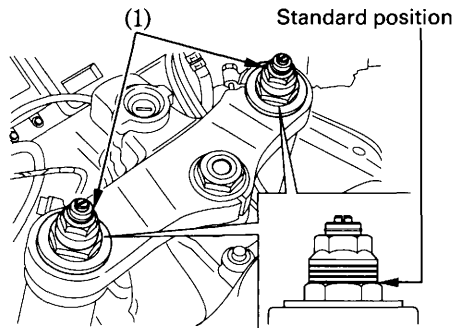

(1) Preload adjuster