

| (Ref.No.) Description | Function |
|--|---|
| (9) Left turn signal indicator (green) | Flashes when the left turn signal operates. |
| (10) Malfunction indicator (red) | Lights when coolant is over the specified temperature, and/or engine oil pressure is below normal operating range, and/or PGM-FI (Programmed Fuel Injection) system is abnormal. Should also light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm. See page 20 – 22 . |
| (11) Neutral indicator (green) | Lights when the transmission is in neutral. |