

INNER PANEL


The right and left inner panels can be removed in the same manner.

Removal:

1. Remove the fuel tank bolts (1) with washers.
2. Remove the inner panel bolts (2).
3. Remove the clip (3).
4. Up the fuel tank (4), and remove the inner panel (5).

Installation:

- Installation can be done in the reverse order of removal.

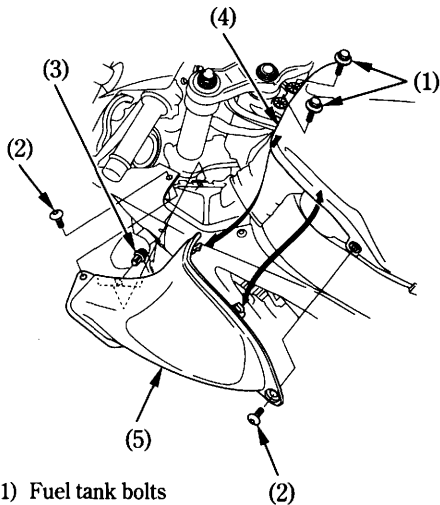

- (1) Fuel tank bolts
- (2) Inner panel bolts
- (3) Clip
- (4) Fuel tank
- (5) Inner panel