


## AIR CLEANER

Refer to the Safety Precautions on page 84 .


The air cleaner should be serviced at regular intervals (page 86 ). Service more frequently when riding in unusually wet or dusty areas.

1. Raise the fuel tank (page 69 ).
2. Remove the air cleaner housing cover (1) by removing the screws (2).

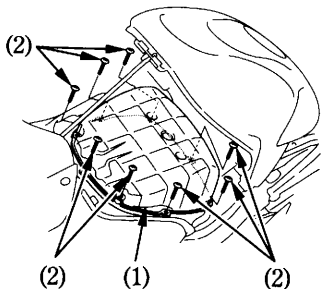

- (1) Air cleaner housing cover  
(2) Screws

3. Take out the air cleaner housing cover with air cleaner (3) and clean the air cleaner by tapping it lightly to loosen dust. Blow away the remaining dust by applying compressed air from the wire net side (4) of the air cleaner.
- Replace the air cleaner if it is excessively dirty, torn or damage.
4. Install the air cleaner.
5. Install the removed parts in reverse order of removal.

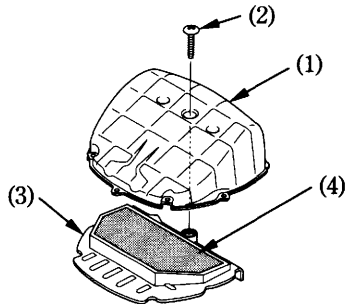

- (3) Air cleaner  
(4) Wire net side