

Periodic Maintenance

Tires & Wheels	<p>Check the air pressure with a gauge and add air if needed (page 118). Examine the tread for wear (page 120). Look closely for nails, embedded objects, cuts, and other types of damage (page 120). Roll your scooter so you can inspect the entire surface. Check the condition of the wheels.</p>
Fluids	<p>Check the levels of the engine oil (page 94) and coolant (page 101). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brakelight, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the front and rear brake levers (page 114), and throttle grip.</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>