


# Maintenance Lid Removal

Refer to *Safety Precautions* on page 70 .

The maintenance lid must be removed to service the coolant, fuse and battery.

## UNDER SEAT

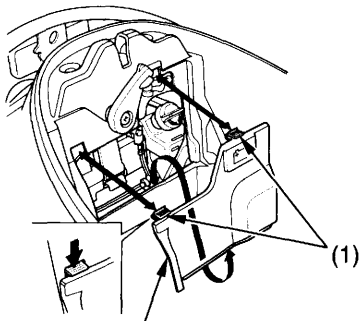

(1) tabs

(2)

(2) maintenance lid

## Removal

1. Open the seat (page 26 ).
2. Release the tabs ( 1 ), then remove the maintenance lid ( 2 ).

## Installation

- Installation can be done in the reverse order of removal.