

Engine Idle Speed

2. Place your scooter on its center stand on a firm, level surface.
3. Remove the plug maintenance lid (page 86).
4. Connect a tachometer to the engine.
5. Open the seat (page 26) and remove the rubber plug (1).
6. Lock the rear wheel by squeezing the rear brake lever and setting the lock lever (page 24).
Start the engine.
7. Adjust idle speed with the throttle stop screw (2).
Idle speed:
2,000 \pm 100 rpm