


Spark Plug

2. Disconnect the spark plug cap (1).
Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Clean any dirt from around the spark plug base.
Using the spark plug wrench, remove the spark plug.
4. Discard the spark plug.
5. Check the spark plug gap (2), using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (3) carefully.
The gap should be:
0.031 – 0.035 in (0.80 – 0.90 mm)

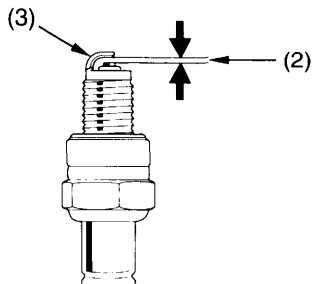

(2) spark plug gap (3) side electrode

6. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.