

Inspection

1. Place your scooter on its center stand.
2. Check freeplay by pulling in slowly on the front brake lever (1) and rear brake lever (2) until each brake starts to engage.

Freeplay at the tip of the brake levers should be:

$3/8 - 13/16$ in (10 – 20 mm)


If necessary, adjust to the specified range.

Adjustment

1. First, adjust the freeplay of the front brake lever.

Turn the brake adjusting nut (3). Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4).

LEFT FRONT

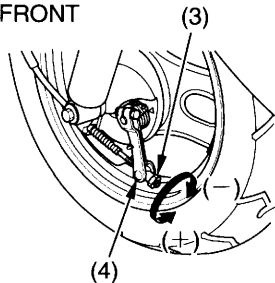

- (3) adjusting nut (+) increase freeplay
(4) arm pin (-) decrease freeplay

(cont'd)