


# Brakes

2. Next, adjust the freeplay of the rear brake lever.

Turn the brake adjusting nut (5). Make sure the cut-out on the adjusting nut is seated on the brake arm pin (6).


## LEFT REAR

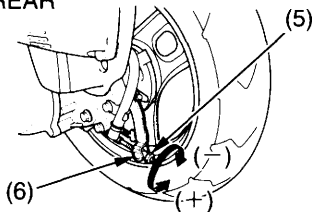

- (5) adjusting nut    (+) increase freeplay  
(6) arm pin        (-) decrease freeplay

3. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.

4. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

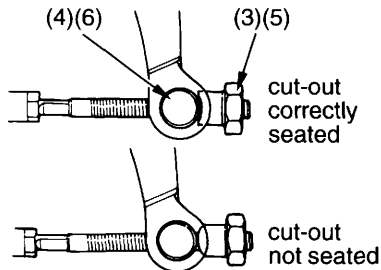

- (3)(5) adjusting nut  
(4)(6) arm pin

## Other Inspections

- Make sure the brake arm, spring, and fasteners are in good condition.