

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)					Refer to page	
				× 1,000 mi	0.6	2.5	5	7.5		
				× 1,000 km	1.0	4	8	12		
EMISSION RELATED ITEMS	*	FUEL LINE						I	—	
	*	THROTTLE OPERATION				I	I	I	—	
		AIR CLEANER	2					R	105	
		CRANKCASE BREATHER	3			C	C	C	106	
		SPARK PLUG					R		111	
	*	VALVE CLEARANCE			EVERY 15,000 mi (24,000 km) I					—
		ENGINE OIL			INITIAL = 600mi (1,000km) or 1 month : R REGULAR = EVERY 2,500mi (4,000km) or 6 months : R					94
	*	ENGINE OIL STRAINER SCREEN						C	98	
	*	ENGINE IDLE SPEED			I	I	I	I	109	
		RADIATOR COOLANT	4						101	
	*	COOLING SYSTEM						I	—	
	*	SECONDARY AIR SUPPLY SYSTEM						I	—	

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188).