

# Maintenance Schedule

ITEM		FREQUENCY	ODOMETER READING (Note 1)					Refer to page
			× 1,000 mi	0.6	2.5	5	7.5	
		NOTE	× 1,000 km	1.0	4	8	12	
NON-EMISSION RELATED ITEMS		BRAKE SHOES WEAR						117
		BRAKE SYSTEM						114
	*	BRAKE LOCK OPERATION						24
	*	HEADLIGHT AIM						-
	**	CLUTCH SHOES WEAR						-
	*	SUSPENSION						-
	*	NUTS, BOLTS, FASTENERS						-
	**	WHEELS/TIRES						-
	**	STEERING HEAD BEARINGS						-

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188 ).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.