


## Spark Plug

---

2. Disconnect the spark plug cap (1).  
Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Clean any dirt from around the spark plug base.  
Using a spark plug wrench, remove the spark plug.
4. Discard the spark plug.
5. Check the spark plug gap (2), using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (3) carefully.  
The gap should be:  
0.031–0.035 in (0.80–0.90 mm)

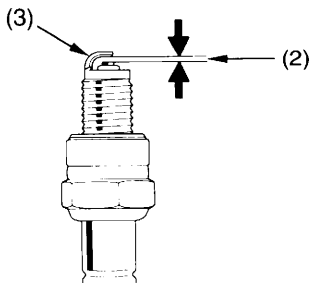

(2) spark plug gap      (3) side electrode

6. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.