

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

## Inspection

1. Place your scooter on its center stand.
2. Check freeplay by pulling in slowly on the front brake lever (1) and rear brake lever (2) until each brake starts to engage.

Freeplay at the tip of the brake levers should be:


3/8 – 13/16 in (10 – 20mm)

If necessary, adjust to the specified range.


## Adjustment

1. Adjust by turning the brake adjusting nut (3) a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4).

LEFT FRONT

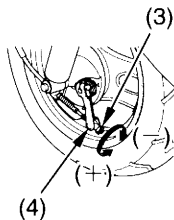

LEFT REAR

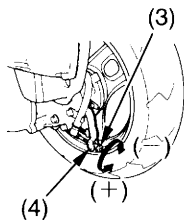

- (3) adjusting nut (+) increase freeplay  
(4) brake arm pin (-) decrease freeplay