



# Brakes

2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

After adjustment, push the brake arm (5) to confirm that there is a gap between the rear brake adjusting nut (3) and the brake arm pin (4).

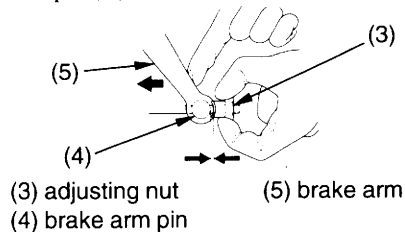

After adjustment, confirm the freeplay of the brake lever.

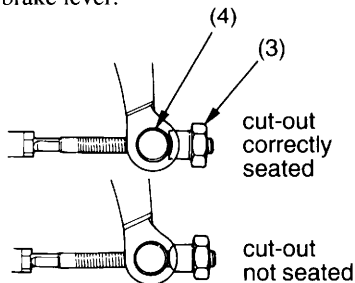

- (3) adjusting nut  
(4) brake arm pin

## Other Inspections

- Make sure the brake arm, spring, and fasteners are in good condition.