

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇨	Initial Maint.	Regular Maint. Interval					Refer to page:	
				mi	100	600	1,200	1,800		2,400
				km	150	1,000	2,000	3,000		4,000
				Note	Month	1	6	12		18
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					99	
	Drive Chain Slider			I	I	I	I	I	100	
	Brake Shoe Wear			I	I	I	I	I	86	
	Brake System		I	I	I	I	I	I	83	
	Clutch System		I	I	I	I	I	I	71	
	Side Stand				I			I	98	
*	Suspension				I			I	80	
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours					78	
*	Nuts, Bolts, Fasteners		I		I			I	—	
**	Wheels/Tires		I	I	I	I	I	I	89, 94	
**	Steering Head Bearings		I		I			I	—	

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified.

Refer to the official Honda Service Manual (page 144).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.