
THROTTLE OPERATION

Refer to the Safety Precautions on page 44.

Cable Inspection:

- Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
- Inspect the condition of the throttle cables from the throttle grip down to the carburetor. If the cables are kinked, chafed or improperly routed, they should be replaced and/or rerouted.
- Check the cables for tension or stress at all steering position. Lubricate the throttle cables with a commercially available cable lubricant to prevent premature wear and corrosion.

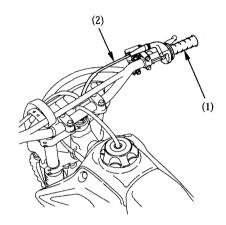

- (1) Throttle
- (2) Throttle cables