
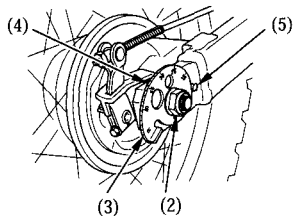


### Adjustment:

If the drive chain requires adjustment, the procedure is as follows:

1. Place a support block under the engine to raise the rear wheel off the ground.
2. Loosen the rear axle nut (2) while holding the axle.
3. Turn both the right and left adjusters (3) equally to increase or decrease chain slack.
4. After adjusting, be sure the same adjuster index marks (4) align with the stopper pins (5) on both sides of the swingarm.

If the drive chain slack is excessive when the rear axle is moved to the furthest limit of adjustment, the drive chain is worn and must be replaced.

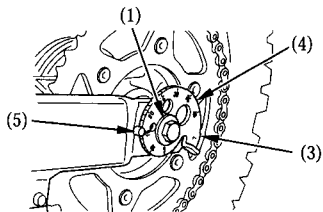

- |                    |                 |
|--------------------|-----------------|
| (1) Axle           | (4) Index mark  |
| (2) Axle nut       | (5) Stopper pin |
| (3) Chain adjuster |                 |