


## Fuel Tank

The fuel tank capacity including the reserve supply is:

8.7 ℓ (2.30 US gal , 1.91 Imp gal)

To open the fuel fill cap (1), open the fuel fill cap cover (2), insert the ignition key (3) and turn it clockwise and then turn the fuel fill cap counterclockwise.

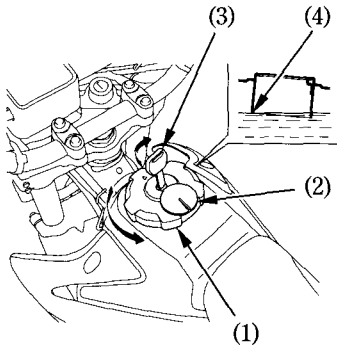

- |                         |                  |
|-------------------------|------------------|
| (1) Fuel fill cap       | (3) Ignition key |
| (2) Fuel fill cap cover | (4) Filler neck  |

Do not overfill the tank. There should be no fuel in the filler neck (4).

After refueling, install the fuel fill cap by turning it clockwise. Turn the ignition key counterclockwise and remove it. Close the fuel fill cap cover.

## **⚠ WARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.