

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [ NOTE (1) ]								Refer to Page
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
* FUEL LINE					I		I		I	—	
* FUEL STRAINER SCREEN				C	C	C	C	C	C	—	
* THROTTLE OPERATION					I		I		I	73	
* CHOKE OPERATION					I		I		I	—	
AIR CLEANER	NOTE (2)					R			R	62	
* SUB AIR CLEANER						R			R	—	
CRANKCASE BREATHER	NOTE (3)			C	C	C	C	C	C	64	
SPARK PLUG				I	R	I	R	I	R	71	
* VALVE CLEARANCE				I	I	I	I	I	I	—	
ENGINE OIL	NOTE (5)			R	EVERY 3,200 km (2,000 mi)				R	68	
* ENGINE OIL STRAINER SCREEN						C		C	C	68	
** ENGINE OIL CENTRIFUGAL FILTER						C		C	C	—	
* ENGINE IDLE SPEED				I	I	I	I	I	I	74	
* SECONDARY AIR SUPPLY SYSTEM						I		I	I	—	