


## Front Wheel Installation

1. Install the side collar into the left side wheel hub.
2. Position the wheel between the fork legs and insert the front axle shaft from the right side, through the right fork leg and wheel hub.
- Make sure that the lug (5) on the left fork leg is contacting the lug on the speedometer gear box.

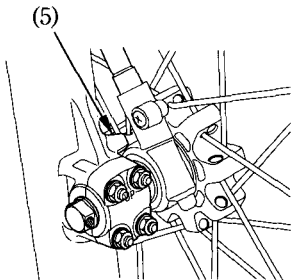

(5) Lug (speedometer gearbox)

- When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.
3. Tighten the front axle shaft to the specified torque.  
Front axle shaft torque:  
74 N·m (7.5 kgf·m , 54 lbf·ft)
4. First tighten the upper axle holder nuts to the specified torque, then tighten the lower axle holder nuts to the same torque:  
12 N·m (1.2 kgf·m , 9 lbf·ft)
5. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

6. Install the speedometer cable and tighten the screw securely.