


Fuse Box:

The fuse box (1) is located behind the left side cover.

The specified fuse is:

10A

1. Remove the left side cover (page 36).
2. Open the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is located in the fuse box.
4. Install the fuse box cover and the left side cover.

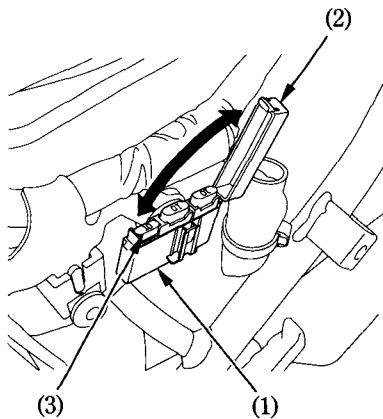

- (1) Fuse box
(2) Fuse box cover
(3) Spare fuse