

### Main Fuse:

The main fuse (1) is located behind the left side cover.


The specified fuse is:

20A

1. Remove the left side cover (page 36 ).
2. Disconnect the wire connector (2) of the starter magnetic switch (3).
3. Pull out the fuse. If the main fuse is blown, install a new fuse.

The spare main fuse (4) is located under the starter magnetic switch.

4. Reconnect the wire connector and install the left side cover.

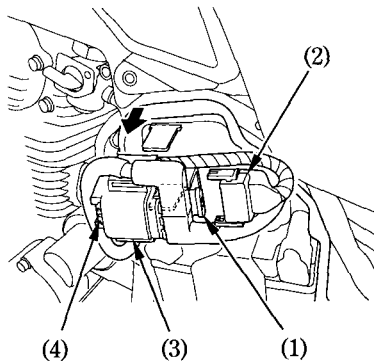

- (1) Main fuse
- (2) Wire connector
- (3) Starter magnetic switch
- (4) Spare main fuse