

Exhaust Pipe/Muffler Inspection


Check the mounting bolts and joint nuts for tightness.

Check the exhaust pipe, exhaust joint pipe and mufflers for cracks or deformation.

A damaged exhaust pipe, exhaust joint pipe and mufflers may reduce engine performance.


Muffler Removal

1. Remove the seat mounting bolts (1), side cover bolts (2) and side covers (3).

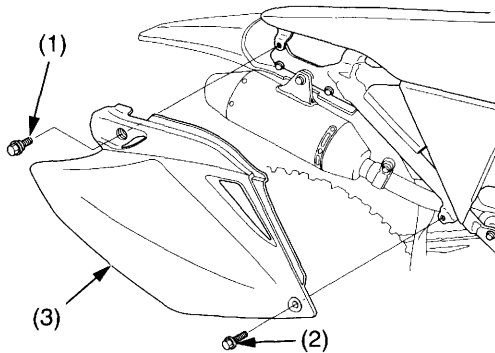

- (1) seat mounting bolt
(2) side cover bolt
(3) side cover

2. Loosen the muffler clamp bolts (4).
3. Remove the mufflers (5) by removing the muffler mounting bolts (6) and washers (7).

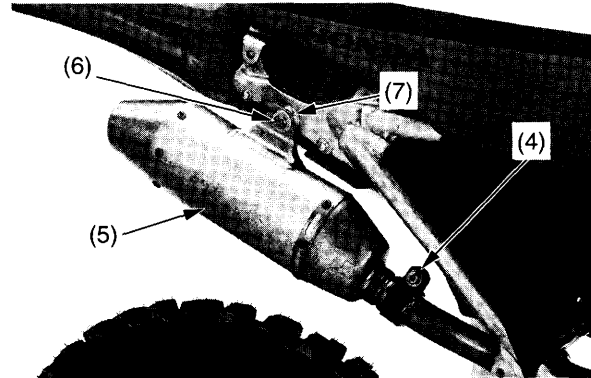

- (4) muffler clamp bolt
(5) muffler
(6) muffler mounting bolt
(7) washer