


Fuel Tank Removal


Installation

1. Install the fuel tank on the frame.
2. Install the fuel valve (1) and tighten fuel valve bolt (2).
3. Connect the fuel line (3) to the fuel valve.

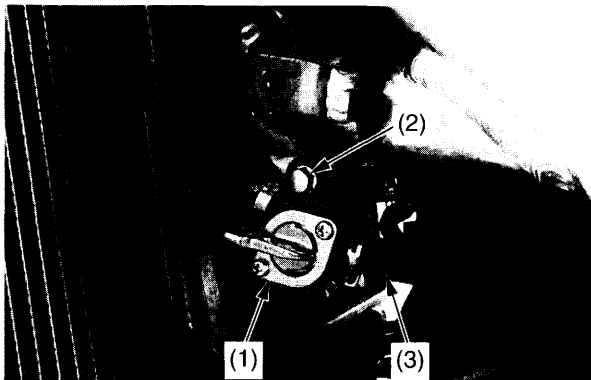


(1) fuel valve (3) fuel line
(2) fuel valve bolt

4. Install and tighten the fuel tank bolt (4).
5. Hook the air cleaner cover rubber (5).
6. Install the fuel tank band (6).
7. Put the breather tube (7) in the steering stem nut.

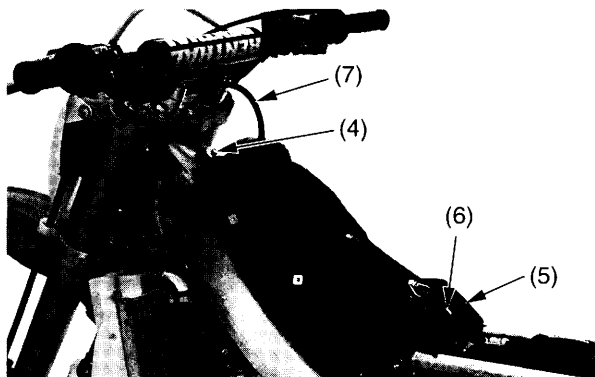

(4) fuel tank bolt (6) fuel tank band
(5) air cleaner cover rubber (7) breather tube

8. Install the shrouds (8) and shroud B bolts/collars (9).
Tighten the shroud B bolts to the specified torque:
3.7 lbf-ft (5 N·m, 0.5 kgf·m)
9. Install the shroud A bolts/collars (10).

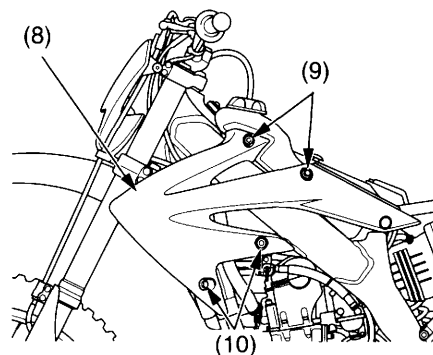

(8) shroud
(9) shroud B bolts/collars
(10) shroud A bolts/collars

10. Install the seat (page 36).